

LightSync Wall Sensor Local Parameter Settings Technical Bulletin

Setting the LSWS Device Parameter Configuration

Using Button 1 on the switch the installer can change the parameter configuration of the sensor.

1. Changing to Local settings

- Hold Button for 20+ seconds until the red sensor LED and button 1 blue LEDs alternate, then release.
- The red LED will flash the parameter number 1 every 3 seconds.
- Change parameter 1 from over the wire (OTW) to Local before proceeding.
- Hold button 1 to enter parameter 1, the blue LED will flash 1 time ever 3 seconds
- Tap the button to select local configuration, 2 blue flashes.
- Hold the button to change, red LED will stay on indicating a change was made.

2. Changing the Sensitivity and Time delay

- Tap button 1 to move from one parameter to the next 1-6 red flashes.
- Hold the button to select the parameter to be changed.
- Button 1 blue LED will flash parameter value every 3 seconds.
- Hold the button to select the new value to be used, red LED will stay on to acknowledge change.

3. Saving the Settings

- Tap button until the red LED flashes 6 times.
- Hold the button to select.
- The blue LED will flash the value of 1, Tap the button to change to 2 flashes of the blue LED
- Hold the button to save, red LED will stay on for a few seconds then the LSWS will cycle all blue LED.

If there is no activity for 20 seconds, the device will discard any changes made and revert to previous settings.

Parameter	(Red LED)	Value (Blue LED)
Settings	1	1 = OTW * 2 = Local
PIR	2	1 = Low 2 = Mid * 3 = High
Sensitivity	3	1 = Low 2 = Mid * 3 = High
Acoustic	3	1 = Low 2 = Mid * 3 = High
Time Off	4	1 = 5 Min. 2 = 10 Min. 3 = 15 Min. 4 = 20 Min. * 5 = 30 Min. 6 = 60 Min. 7 = 120 Min
LED Status	5	1 = Disabled 2 = Enabled *
Save/Exit	6	1 = Discard Changes 2 = Save Changes

* Indicates factory default setting.